


CARE AND OPERATION OF THE ATMOS CLOCK

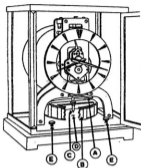

NEVER move or shift the **ATMOS** Clock before locking the Balance Wheel with the Locking Lever (A) beneath the dial.

1. Place the **ATMOS** Clock on a mantel or a piece of furniture which is level and sturdy. Open the "friction-tight" door in the front of the clock. (The delicate mechanism is protected in shipment by a wooden block over the top of the movement and a string with a red tag attached to the balance staff. If these are still in place, carefully remove the block, cut the string and remove the tag.)

2. HOW TO START AND STOP

To start, push the locking lever (A) beneath the dial slowly and completely, from right to left. This starts the balance wheel oscillating slowly. **NEVER TOUCH THE BALANCE WHEEL (B)**. To stop and lock balance wheel, push locking lever beneath the dial slowly and completely, from left to right. Never leave the locking lever in a "dead-center" position.

NEVER MOVE OR SHIFT THE ATMOS CLOCK BEFORE LOCKING THE BALANCE WHEEL WITH THE LOCKING LEVER.

3. HOW TO LEVEL

Your **ATMOS** Clock must always be perfectly level to assure accurate timekeeping. First, put the clock in the place where it will remain - then start the movement, as described in Paragraph 2.

The clock is level when the pointed brass pin (C), on the bottom of the balance wheel, points directly down to the blue dot (D), on the base-plate of the clock.

To adjust for true level - while the balance wheel is oscillating slowly - turn each of the two thumbscrews (E) (E), on the base of the clock. Turn them alternately until the pin is centered over the blue dot.

4. HOW TO SET

Push the minute hand with your finger clockwise. **NEVER PUSH THE HOUR HAND.**

5. HOW TO REGULATE

On the top of the clock is a pointed lever which can be set over gradations from "S" (Slow) to "F" (Fast). Allow your clock to run one week without setting. Then regulate as necessary.

DON'T touch the Balance Wheel or the Clock Mechanism.

DON'T touch the Hour Hand. Set clock by moving Minute Hand only.

DON'T move or shift the ATMOS Clock before stopping and locking the Balance Wheel with the Locking Lever beneath the Dial.

Your **ATMOS** is a delicate and precise mechanism. It will give you many years of service and pleasure if it is handled carefully.

LE COULTRE

DIVISION OF
LONGINES-WITTNAUER
WATCH COMPANY

CARE AND OPERATION OF THE ATMOS CLOCK